

BestSub[®]



www.bestsub.com



JTtrans[®] Clam Press

(MANUAL)



Product Information



Item Name:
Clam Auto Drawer Press
Item No.:
CLAM-C44
CLAM-C45
CLAM-C46
CLAM-C56




Item Name:
Clam Auto Open Press
Item No.:
CLAM-D44
CLAM-D45
CLAM-D46
CLAM-D56

Description:
Voltage: 220V/110V
Power:
1800W/2000W/2200W/2500W
Temp range: 0-250 °C
Time range: 0-999 Seconds
Heat platen:
40×40cm/40×50cm/40×60cm
/50×60cm
Packing: Carton
Dimension:
810*490*550mm/810*490*550
mm/810*490*550mm/910*590
*570mm
Weight: 38kg/41kg/45kg/52kg



	Temp Display	While the temp symbol is flashing with the press on, and the temp is increasing, it shows the press works well. The temp will stop at the set temp or factory set temp, and the press will keep at that temp.
	Time Display	With the press on, while you pull down the handle, the countdown starts, and the time symbol will flash all the time. After the time is over, the flash stops, the heat platen will automatically rise to its original place slowly.

Structure

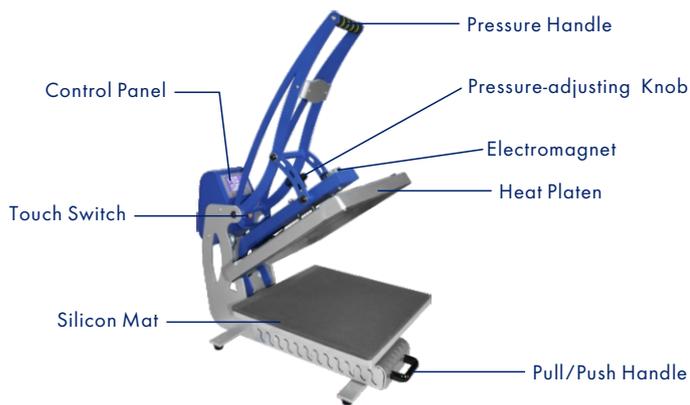

Instruction

1. Turn on the press, the signal light is on. Press the execute key on the control panel, now the press is ready to use. Set your required temp and time.
2. Temp & time setting, press Mode one time, the temp display will flash, press Minus/Plus to get your required temp; press Mode one more time, the time display will flash, press Minus/Plus to get your required time, lastly, press Mode again to confirm the temp and time setting.
3. Adjust the pressure knob to get the suitable pressure, and then start your transfer.
4. After the time is up, the heat platen will rise up automatically.